



Tech Info Library

StyleWriter Printers: Print Quality Depends On Paper (10/96)

Article Created: 7 October 1996

TOPIC -----

I have a StyleWriter and everytime I go to print the only quality option available in the print dialog is Best. The Normal and Draft options are dimmed.

DISCUSSION -----

You need to check the paper type setting. Unless you are printing on special types of media, the paper type should be set for Plain. Some paper types such as Transparency, Glossy, and Back Print Film require you to use the Best quality mode.

Copyright 1996, Apple Computer, Inc.

Keywords: <None>

=====

This information is from the Apple Technical Information Library.

19961008 07:53:05.00

Tech Info Library Article Number: 20510