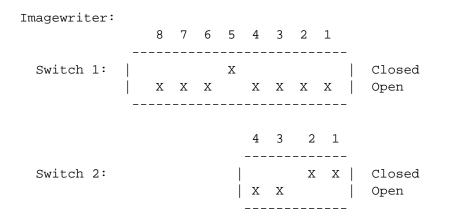## Manzanita software: Printer Switch Settings

The Business Accountant, The Advanced Business Accountant, and BusinessWorks
require 10 characters per inch to properly align on preprinted forms.

```
Imagewriter:
                8  7  6  5  4  3  2  1
              ---------------------------
  Switch 1:   |           X             |  Closed
              |   X  X  X     X  X  X  X |  Open
              ---------------------------


                         4  3    2  1
                         ------------
  Switch 2:             |        X  X |  Closed
                        | X  X        |  Open
                         ------------
```

Refer to page 40 and 41 of the Imagewriter Manual.

Imagewriter II:

Switch settings same as for Imagewriter. Be sure the perforation skip switch
is off.

Interface Cards:

Grapler Plus: Must be version 3.2. To test for version, boot computer and
enter PR#1 (be sure the printer is on and on-line). With the caps lock key on,
enter Control-I V. The version of the card will print to the printer. Enter
Control-I 80N for special character string in "Change Line Printer
Configuration" option of System Setup and Configuration Menu.

NOTE: Apple Computer Inc. is not responsible for the contents of this
      article.
Manzanita Software Systems, Customer Support   (916) 781-3880

Keywords: <None>

==

This information is from the Apple Technical Information Library.

```
19960215 11:05:19.00
```

Tech Info Library Article Number: 1796