



Tech Info Library

LaserWriter IINTX: How To Do ROM Upgrade on Seed Units (11/94)

Article Created: 22 July 1991

Article Reviewed/Updated: 08 November 1994

* RESTRICTED: Apple Internal and Support Providers Only *
Not For General Public Release


TOPIC -----

This articles describes how to perform a ROM upgrade on the early- production LaserWriter IINTX printers with the 32-pin sockets.

DISCUSSION -----

There were 250 LaserWriter IINTX printers released in the early stages of production to field sales offices, specifically for use as seed units. The seed-unit boards have 32-pin sockets. The ROM upgrade kits have the standard 28-pin chips. If any of these printers reached the distribution channel, use this information to perform the ROM upgrade.

1) Position Pin #1 on the ROM chip in Pin #3 of the socket.

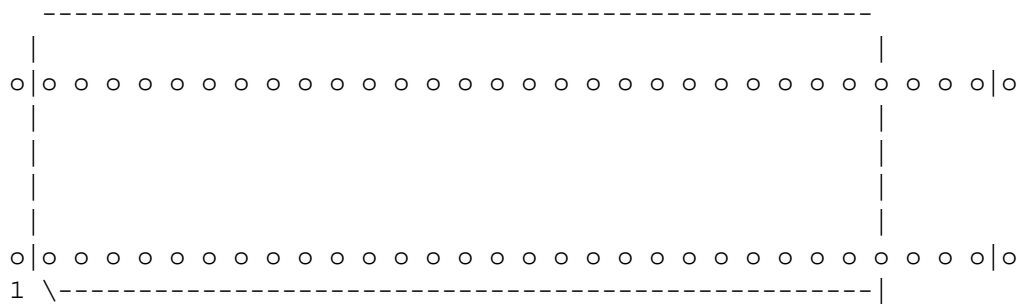

2) Remove the resistors at locations R20 and R22 and reload them at locations R21 and R23.

Article Change History:
08 Nov 1994 - Reviewed for technical accuracy.

Support Information Services
Copyright 1991-94, Apple Computer, Inc.

Keywords: <None>

=====

This information is from the Apple Technical Information Library.

19960215 11:05:19.00

Tech Info Library Article Number: 7919